

OH5X Tracker Programming

Ver 2.1

These are basic instructions how to upload new parameters to the tracker. For more detailed instructions refer to Opentracker manual. Configuration instructions start from page 9.

To program the tracker you need to connect the supplied data cable to the data connector of the tracker and to the serial com D9 connector of a computer with otwincfg.exe software. If your computer does not have serial D9 connector you can use USB-RS232 adapter.

1. Run otwincfg.exe by double clicking the icon, select your com port and click connect.
2. Power up the tracker. Red status led will light up.

Main configuration window will pop up and you are now able to configure the tracker. When you have set up all necessary parameters click WRITE after which the software will show a transfer progress bar and parameters are transferred to the tracker. If you want to save what you have just done click SAVE TO FILE button and select location where you want to save the configuration file.

3. After file transfer click QUIT to exit the program and power down the tracker.

Notes

If your computer does not respond when clicking connect button, power down the tracker and exit the software and do step 1 again with Disable Turbo box checked.

To update the firmware there is a button WEB in the main configuration window. Click it and select appropriate firmware version to be downloaded to the tracker. The tracker is always delivered with the latest stable and tested firmware so change this only if absolutely necessary.

OH5X tracker manual: http://www.oh5x.com/files/FIN_Tracker_Ver_2_1.pdf

Configuration software: <http://www.argentdata.com/support/firmware/otwincfg.exe>

Opentracker manual: <http://www.argentdata.com/support/otplus-manual.pdf>

Yahoo OT group: <http://groups.yahoo.com/group/opentracker/>